


# Changing Maxivision / Slimline light tubes

Before commencing any work on your freezer, it will be necessary to **isolate your freezer** from the electrical supply.

Always do this by **unplugging the freezer** from the socket, this will not affect temperatures for up to 15 minutes.



To make access easier remove both lids, do this by lifting the lid up in its mountings, and pull out bottom first, as in **Pic:1**. Carefully place them on a safe flat surface.

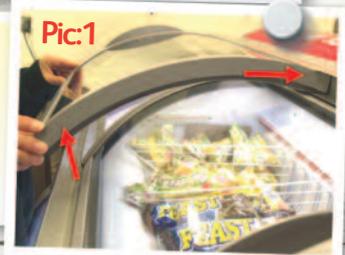

**Pic:2**



Next remove the diffuser/cover. This has a D shaped aperture at one end, usually the right-hand. Pull down using the diffuser Hook provided, this will free the diffuser from its front and rear grooves as in **Pic:2**.

The diffuser/cover is flexible to allow it to fit in and out of its retaining grooves located along the front and rear of the light area.

To remove the tube, grasp between fingers and thumbs of both hands and roll the tube until it clicks, then pull down to release the pins from the grooved connectors at each end of the tube, as in **Pic:3**.



To fit the new tube simply push it into both the left and right connector slots at the same time, taking care that the pins slide up as in reverse of **Pic:3**.

When both ends are in the slots, roll the tube until it clicks once.


Refit the diffuser by placing its back edge into the slot provided, as in **Pic:4**.

The plastic diffuser is flexible, but also hard to squeeze, you will need to be quite strong to squeeze it enough to allow the front edge to fit into its slot.

Try to do this at one end as its easier, then it will clip in along its length as in **Pic:5**. Replace lids, plug the cabinet back into the mains supply and switch on.



**Pic:4**

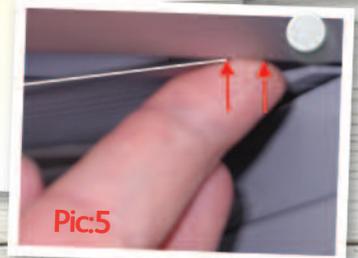

**Pic:5**

**To see a video guide on how to change light tubes visit:**  
<http://www.wallsrefrigerationsolutions.com/downloads/videos>